



VEBKO ONLINE HELP

Advanced Settings of “Report” Part 1

Category	tester
Section	AMT Sequencer Module
Language	English
Generated	2026-10-18

On "Report Setting" window, it is possible to change the view type of "Report View" window by using "HTML" and "PDF" options. Also, by using the "Scroller" of this section, it is possible to navigate through different pages of the report and view the applied changes. Note that "Scroller" is only available in "HTML" mode.



Figure 1

By clicking on "Advanced" button, the advanced settings page opens on the right side of this page. By using "Export Settings", you can save an output "sqs" file containing the settings and if necessary, it is possible to "Load" the setting in the software by using "Import Settings" button and have an output report with the saved settings. This feature is useful when you intend to perform a "Clear Cache" on the software because by doing so, the current settings are removed and "Reset" to default settings of the software. So, before clearing the "Cache", you can export your settings and after clearing the cache import it to the software.

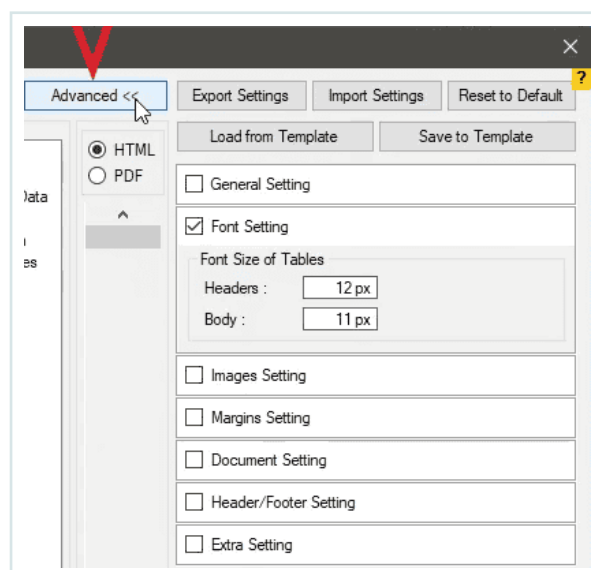


Figure 2

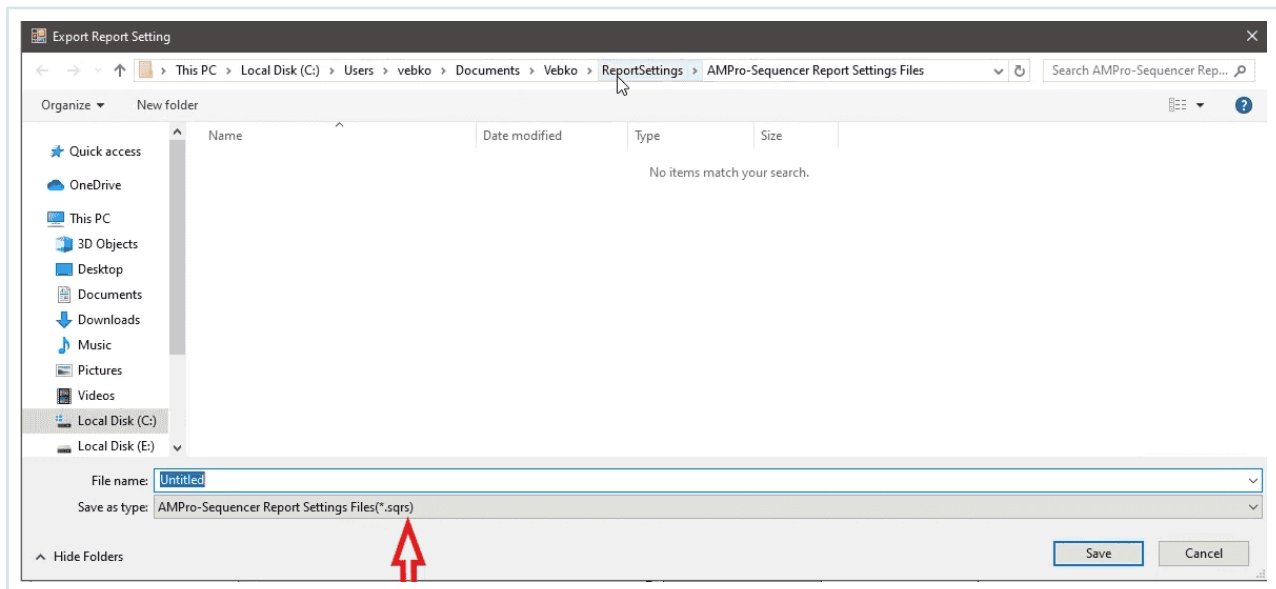


Figure 3

By using "Save to Template" button, it is possible to save the current settings as a "Template" in the software and when necessary "Load" it by using the "Load from Template" button. Also, if any changes have been made to the report, to reset the settings to default settings of the software, you should click on "Reset to Default" button.

In "General Setting" section, the general settings including numbering headers, showing the characteristics curve guidelines, framing of the texts in the report, showing tolerances, as well as showing the binaries which have been set on condition "X" are adjusted. For example, you can see that by checking "Show border", a dotted line border is added around the texts of the report in "Test State" and "Test Module" sections.

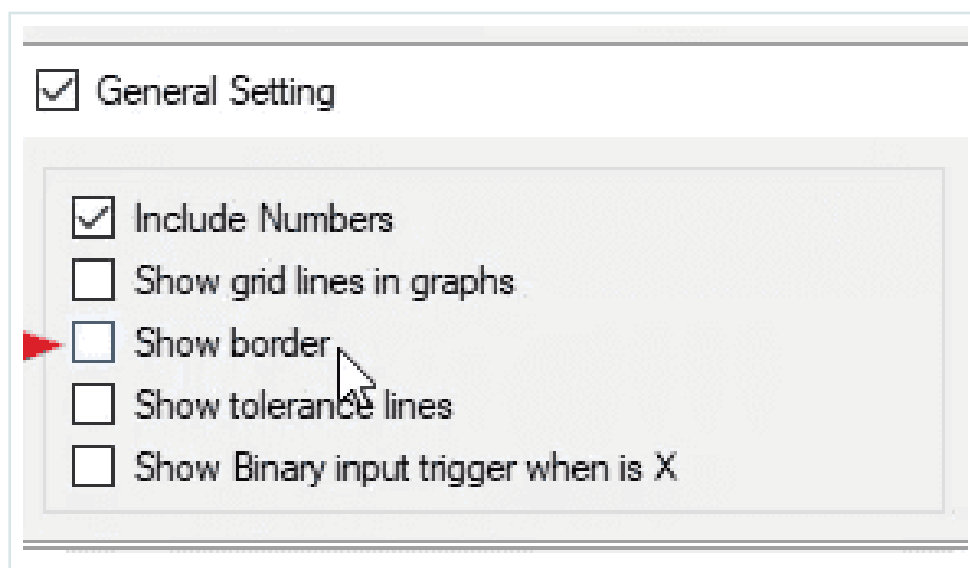


Figure 4

In "Font Setting" section, the font sizes of "Header" and "Body" are adjusted in pixels. "Header" and "Body" are, by default, set on 12 and 11 pixels here. In "Image Setting" section, it is possible to add size of the characteristics curve of the test, size of "Signal View" picture diagrams and size of "Vector View" diagrams in "Characteristics" field, "Signal" field and "Vector View" field respectively.

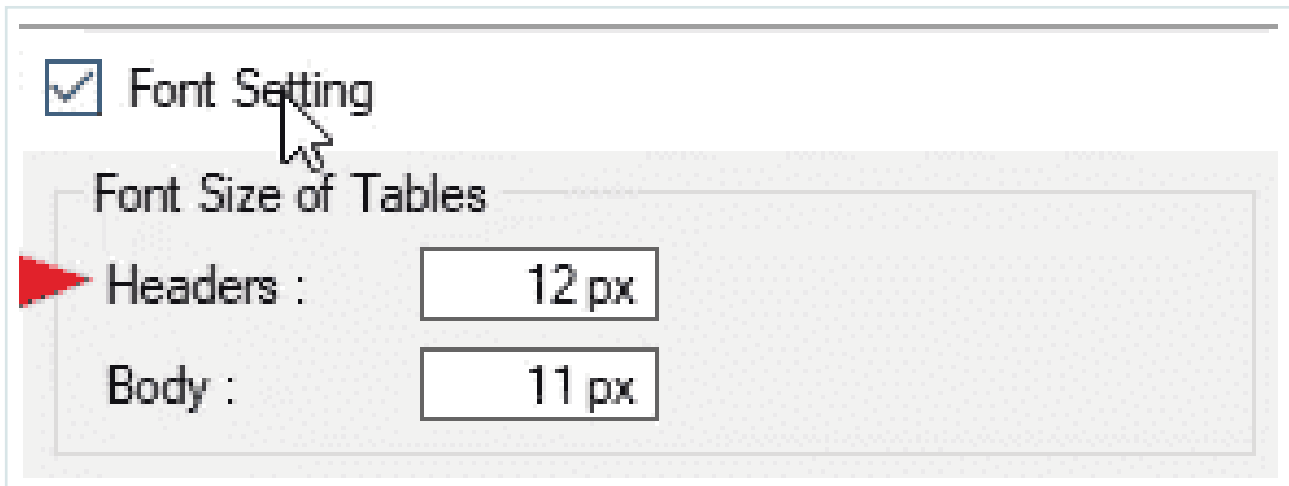


Figure 5

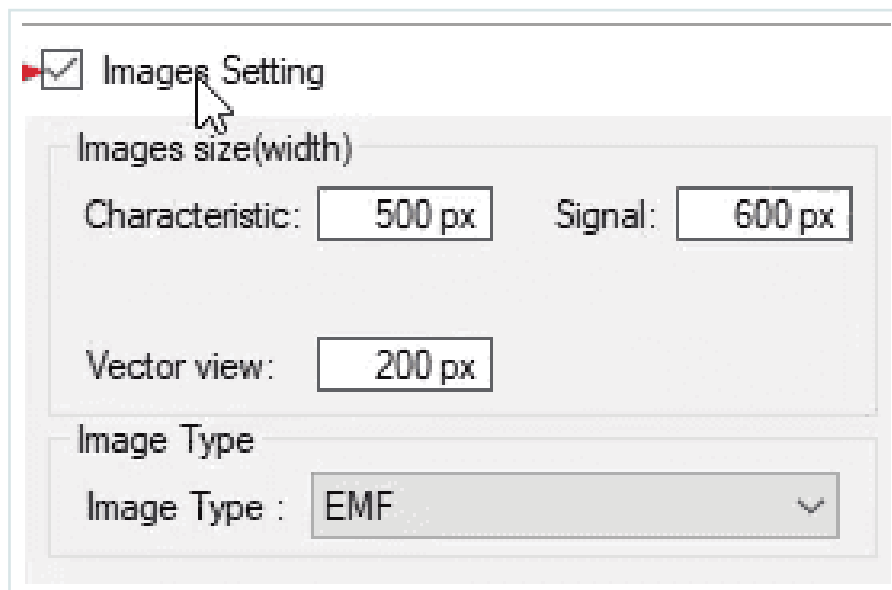


Figure 6

For example, here the picture size of "Signal View" is set on the half of its default size which is 300 pixels. Now, you can see that the size of the picture is changed to half of its previous size on this window. Moreover, if you intend to change the format of the pictures added to the report, you can select your intended format from the list available in "Image Type" section.

[jg1]Advanced_Settings_of_Report_part1