



VEBKO ONLINE HELP

General Setting of Rooms

Category	tester
Section	Default Setting
Language	English
Generated	2026-10-18

There are four main tabs in the software "setting" page. The "Room" tab provides a number of features for different rooms. In the "Date-Time" section, you can select "Persian" or "Christian" as the type of the date used in the output report. By using the other three options in this section, it is possible to show the name of the month and week and milliseconds in the report.

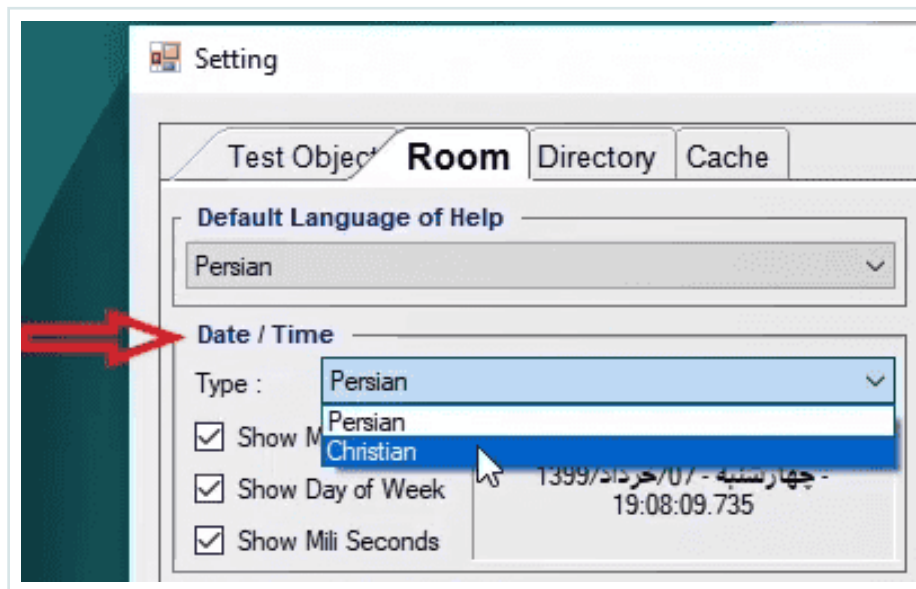


Figure 1

In rooms such as "AMT-Distance" and "AMT-Overcurrent", next to each of the "Fault Types" are written numbers which show the test points, the number of passed test points, the number of failed test points, the number of test points that are outside the range of the device and the number of untested test points respectively. With this explanation, unchecking each of these options in the "Show/Hide Test Counters" will cause the number of points associated with that option not to be displayed.

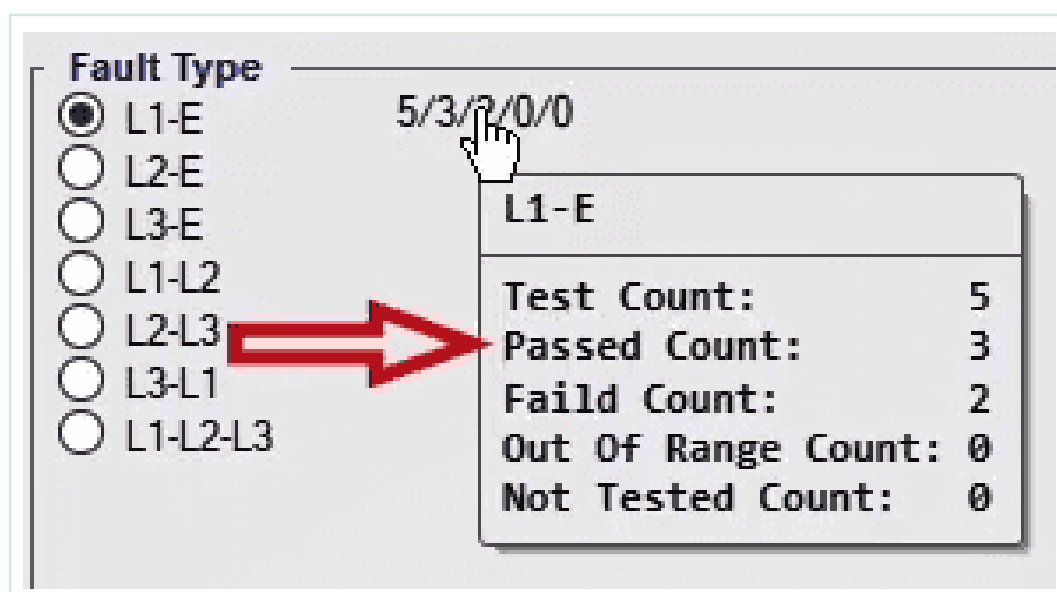


Figure 2

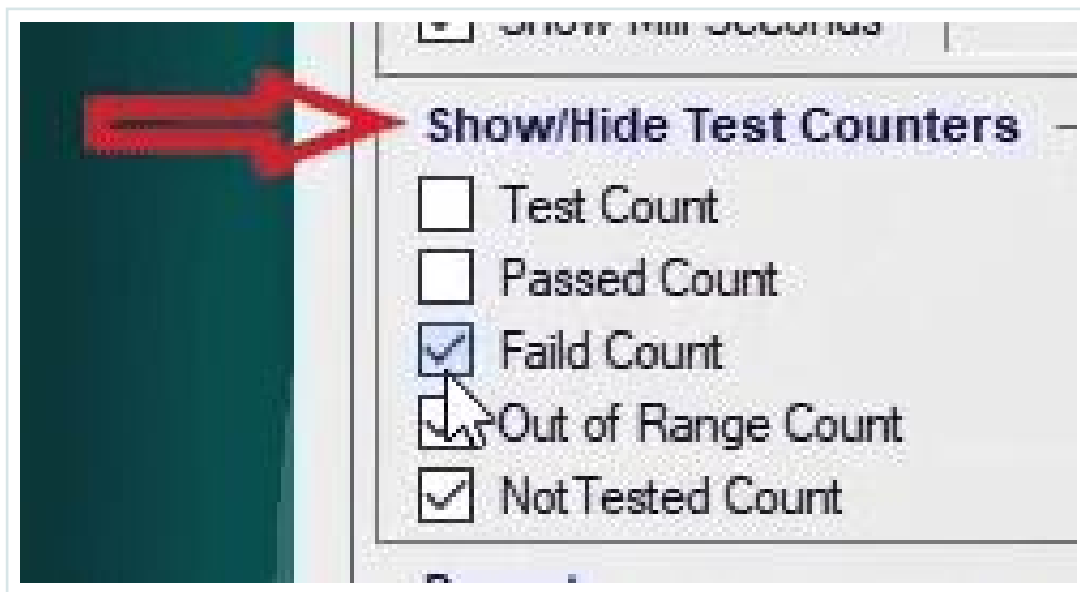


Figure 3

In the "Report Refresh Interval" field of the "Report" section, the update time for the report is specified. In the "Report Package" section, the default settings for the "Reports" are adjusted. In the "Extra Tools" section, clicking on the "Template Report Generator", opens the "PDF Report Creator" page where the desired test files can be imported to get a report. By clicking on "Remove Signature", the "Remove Signature from Report" page opens where, without needing to open the test files, the added signatures to the reports can be removed. In the "Template" section, the settings of the "Test Object" of the device as well as the settings related to displaying numbers in the "Decimal Places" are adjusted.

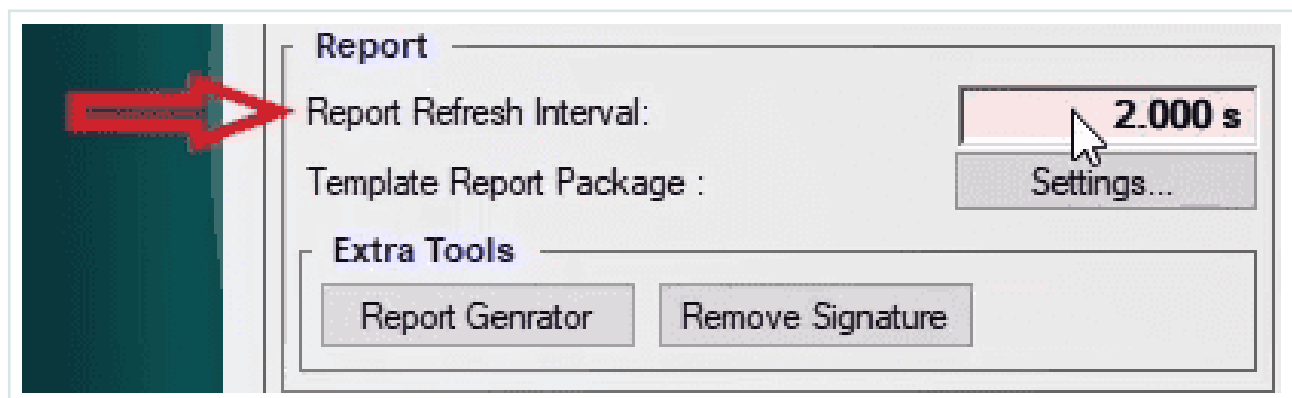


Figure 4

By checking the "Auto Save" option, the software saves the last changes made to the test page according to the time specified in the "Interval" field. These files are also saved in the location specified in the "Directory" box in "History" section. The maximum reserved size for these files and the maximum duration of time that these files are kept in the system is specified in the "Max Size" and "Max Time" field, respectively, and the user is able to change these values. By unchecking any of these

options, the limitation is removed as well. By doing this, if the software crashes for any reason, the test page and the user information will remain safe.

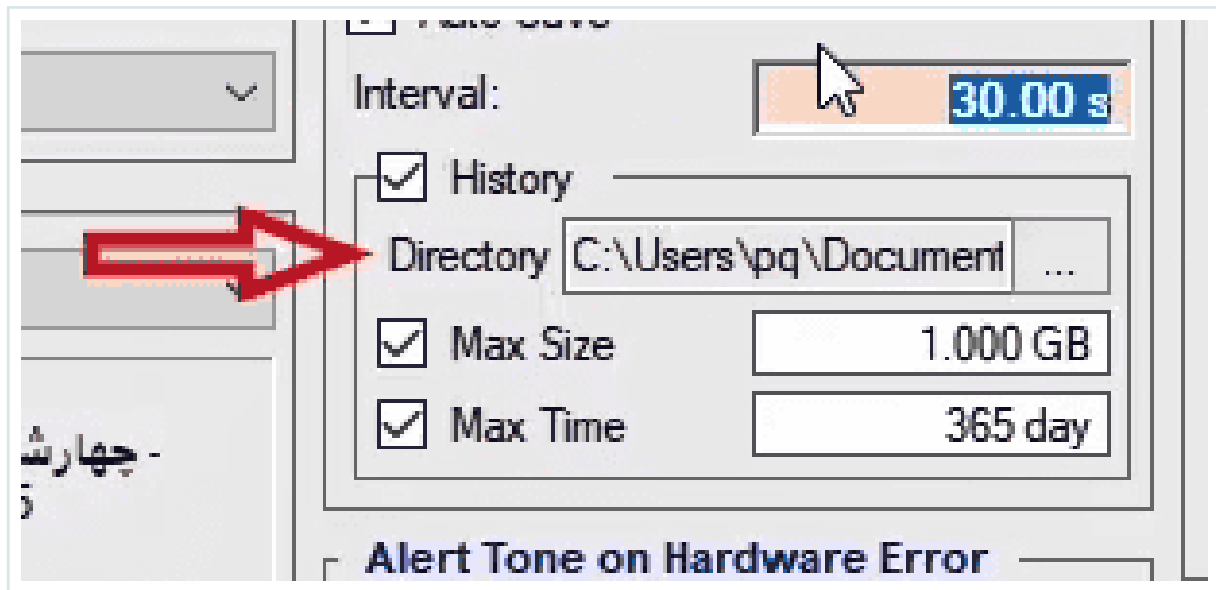


Figure 5

In the "Alert-Tone on Hardware Error" dropdown field, you can select an alert sound for when there is a hardware error in the device. The settings for specifying and changing the sizes of the tables of the rooms such as "Distance" and "Differential" are adjusted in the "Styles of Tables" section. You can customize the "Key Setting" section to be able to use the "Enter" key and the arrow keys to move in the cells of a table. In the "Communication Mode" section, you can choose between "Service System" and "Integrated System" for the connection between different rooms and pages of the software. "Appearance Setting of Groupbox" is designed for personalizing user interface. This setting is divided to two categories of "text" and "border", which are used to personalizing the borders , color and text's fonts. In the following tutorials, all of the above will be stated in detail as well as how to adjust the settings.

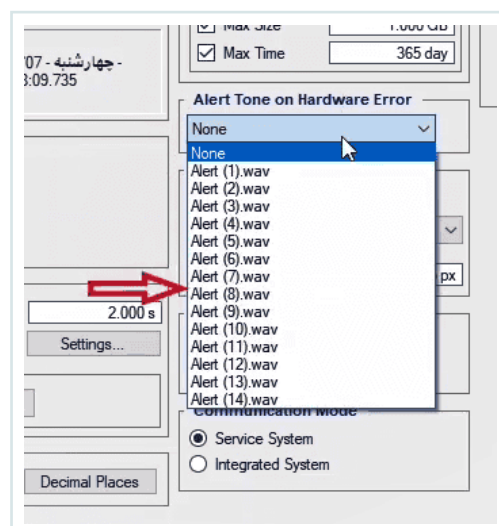


Figure 6

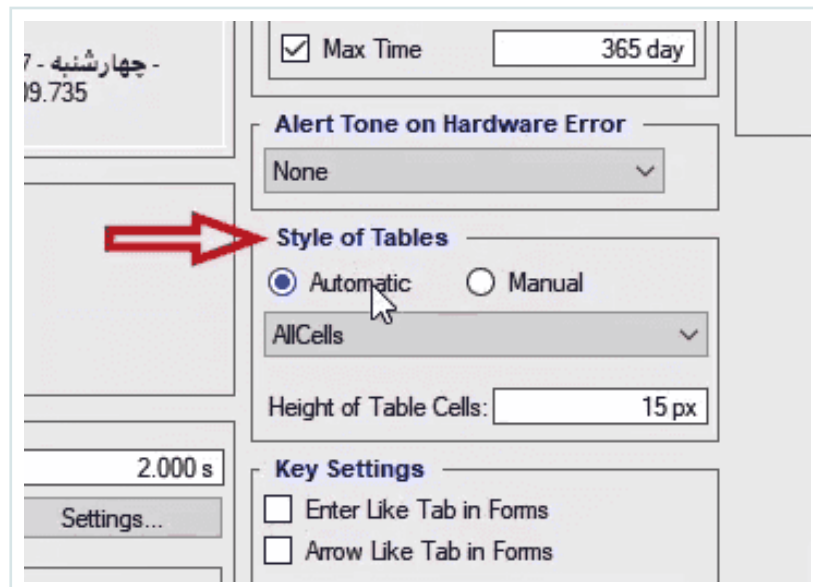


Figure 7

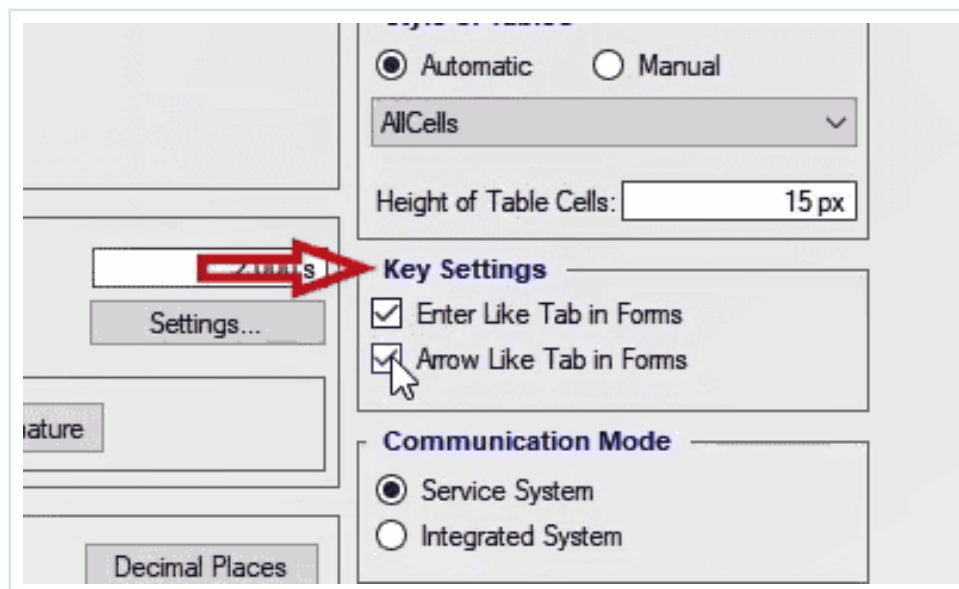


Figure 8

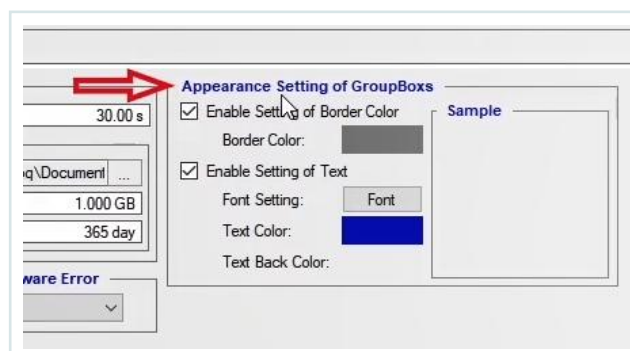




Figure 9

General_Setting_of_Rooms