



VEBKO ONLINE HELP

---

# Preferences Page "Directory" & "Cash" Tab

|           |                        |
|-----------|------------------------|
| Category  | <b>tester</b>          |
| Section   | <b>Default Setting</b> |
| Language  | <b>English</b>         |
| Generated | <b>2026-10-18</b>      |

In the "Directory" tab, the default paths for saving files are specified. By clicking on any of the file formats, this default path can be changed. For example, by double-click on "AMPro-Distance Report Files", its path can be changed to desktop. To save the existing report file, open "Report View" in the "Distance" room and click on the "Export Report". It is seen that the saving path is located on the desktop.

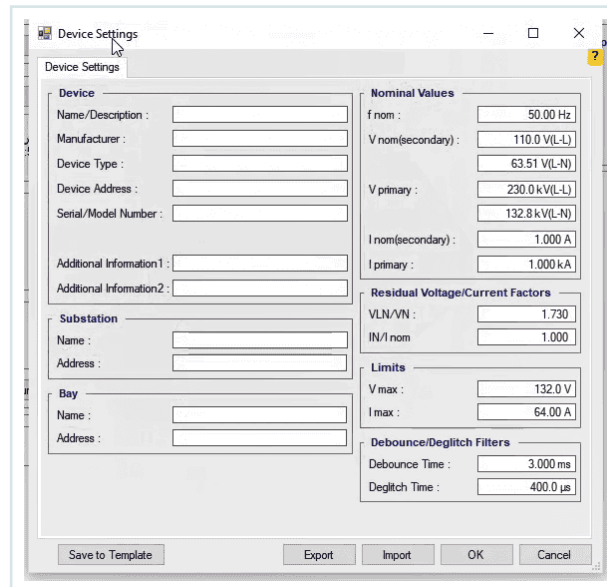


Figure 1

By checking the squares in the "Remember Last Location" column, it is specified that if the user chooses another path while storing the file, the software should remember that path. For example, if you open the "Distance" room, and set the report file saving path on drive "C" and save the file and then if you try to save the file again you can see that the saving path has been changed to that folder.

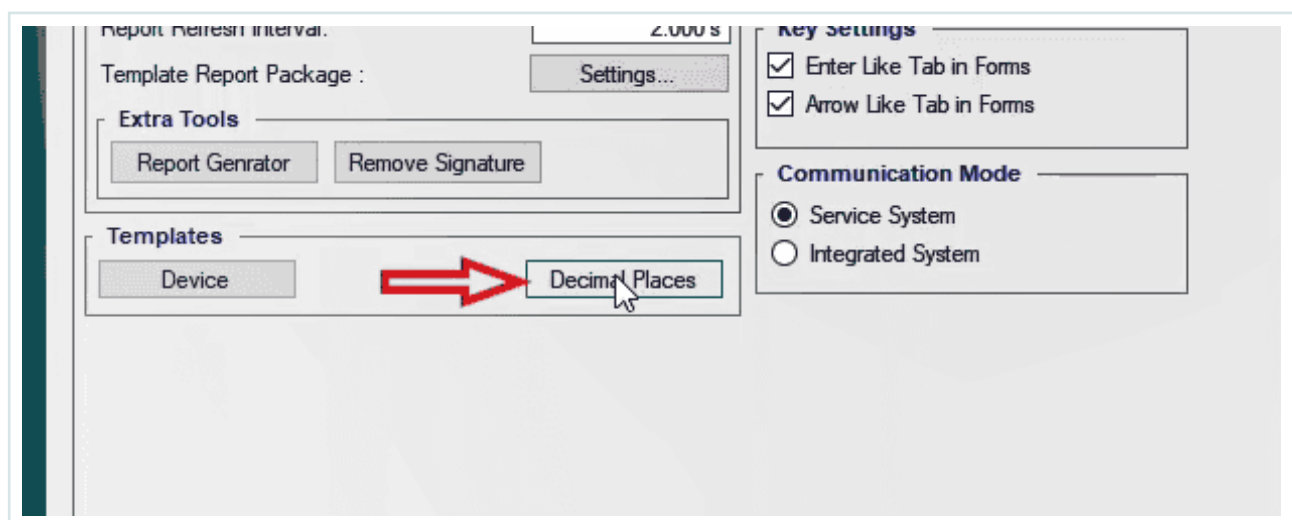


Figure 2

By clicking on the "Restore Selected to Defaults" button in the "Preferences" tab, the changes made to

the squares in the "Remember Last Location" column are restored and reset to the default settings. For example if three squares become unchecked and two of them be selected. By clicking on "Restore Selected to Defaults" it's seen that these squares are gotten back to default state.

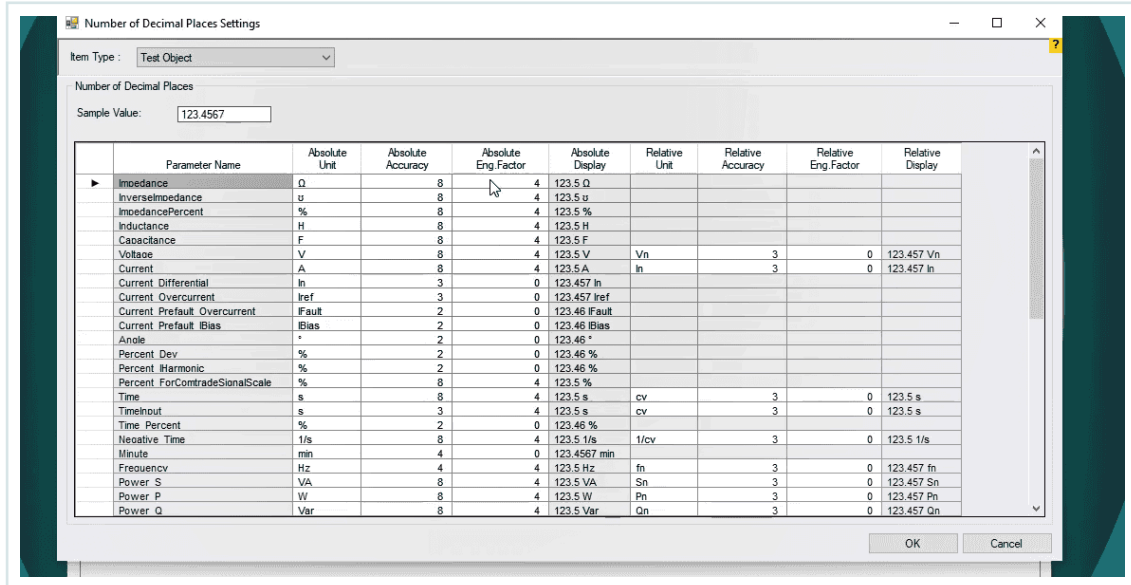


Figure 3

By clicking on the "Reset to Default" button, all settings are reset to the default values. It is possible to save the changes made to the settings of this section in a file by clicking on the "Export" button. When necessary, this file can be imported and applied to other screens. Settings related to different sections of the software are saved in the paths stored in the "Cache" tab. In order to prevent software slowdown in the long run, the software cache must be cleared. For clearing the cache of the software, the "Clear" button should be used. The "Open Roaming Directory" button opens the path where the cache is stored. In this folder, cache files can be viewed or cleared. For clearing, select all of the folders then press the delete button on keyboard.

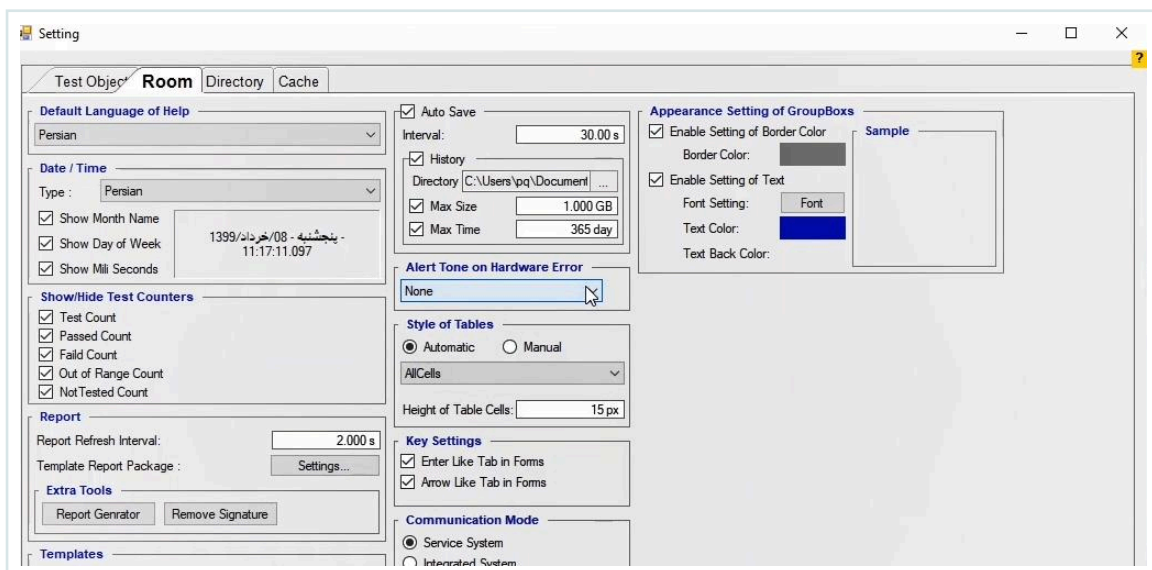




Figure 4

Preferences\_page\_Directory\_and\_Cash\_tab