



VEBKO ONLINE HELP

“Report Setting” Window

Category	tester
Section	AMT Sequencer Module
Language	English
Generated	2026-10-18

In "Hardware Configuration" subcategory, name of the device, hardware status of the device, binary and voltage output status, "Input" binaries status, "Output" binaries status and "AUX DC" voltage status are selected to be added to the "Report". For example, by checking "Analog Outputs" option, you can see that the wiring and activeness or inactiveness status of every voltage and current output is added to the "Report". By checking "Link XRIO References" option, if the value of a parameter in a "State" is linked to a specific parameter in "XRIO", it is mentioned in the "Report". "I L1" current is linked to "CT" secondary current in "Device" section and then "Link XRIO References" option is checked. You can see that its information is added to the "Report".

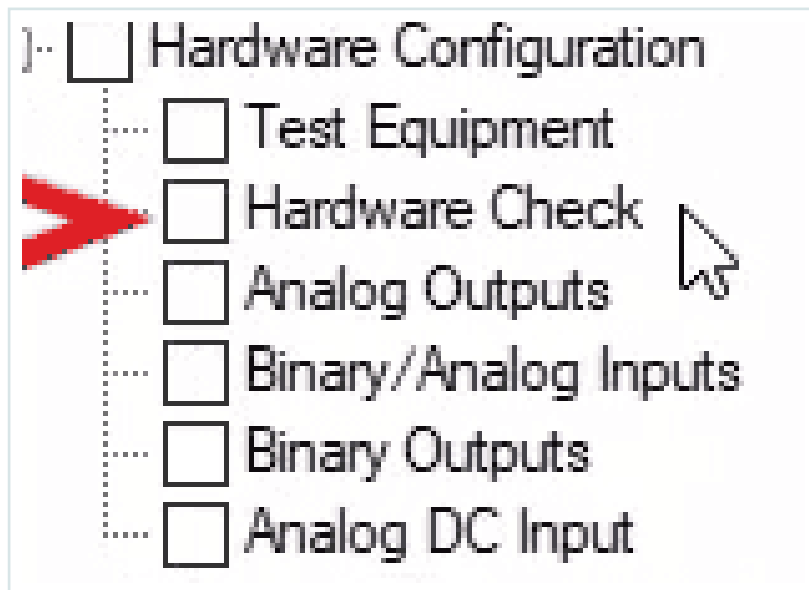


Figure 1

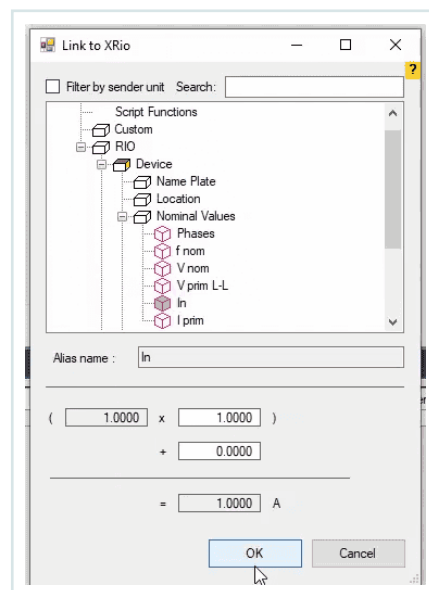


Figure 2

By opening "Test Setting", you can see that its three subcategories including "State Group", "Type

Details" and "Start Test Condition" which are the settings related to "States", their types and test start conditions are located in this section. "State Group" subcategory includes items related to "Detail View" window. If type of any of the "States" is something other than "Normal", in "Type Detail" section it is possible to add their details to the "Report". To do this, by opening any subcategory of this section, for example "Ramp Detail", you can select any section of "State Type" settings to be displayed in the "Report". In "Start Test Condition" section, it is possible to select the specified start condition of the test to be displayed in the "Report".

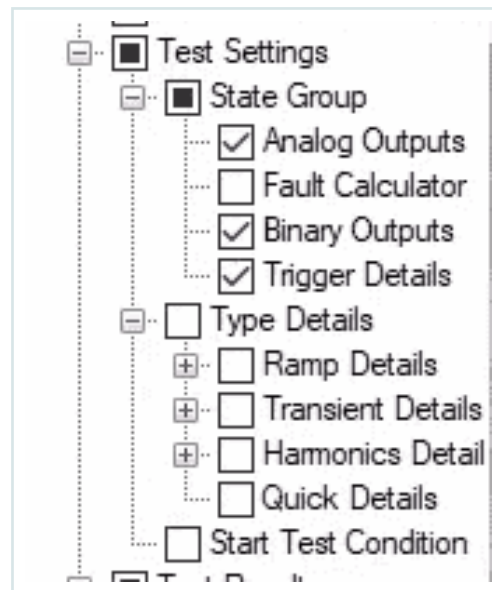


Figure 3

In "Test Result" section, you can select the results of your test which may include assessments, time of the test, signal waveform status in "Signal View", vector view of device voltages and currents in "Vector View" etc. to be displayed in the "Report". Note that in "All State" subcategory you can specify the items you wish to be displayed in the "Report" for all of the "States". Before selecting the options available in "Current State", first you need to determine the intended "State" and then by going to this subcategory, select the items of this "State" that you wish them to be displayed in the "Report".

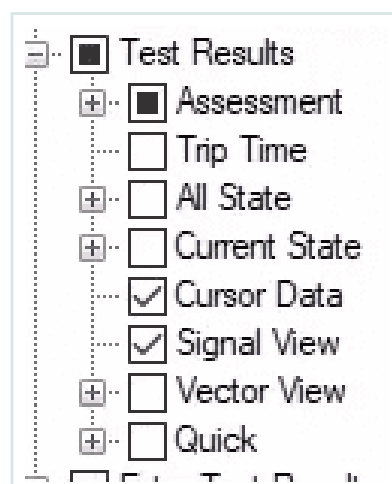


Figure 4

If extra items such as "Operation" are specified for the test, you can select them to be displayed in the "Report" from "Extra Test Result" section. In "Show Calculated" subcategory, you can select the items related to the "Operations" specified in "Signal View" settings to be displayed in the report. If you have specified a lissajous diagram for the test, by selecting "Knee point" and "lissajous" and its subcategories, you can add them to the report.

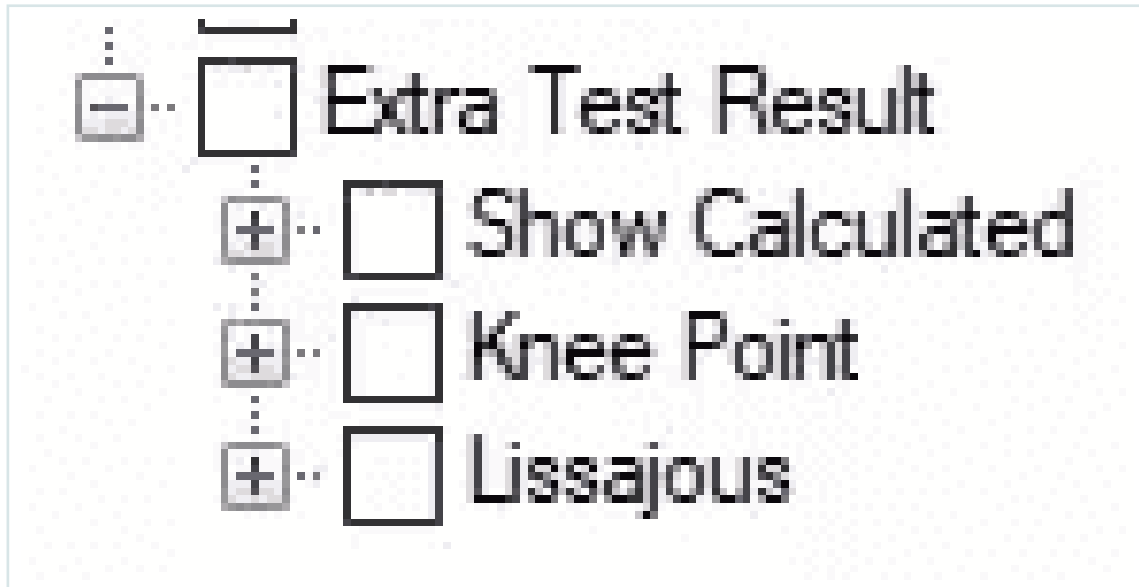


Figure 5

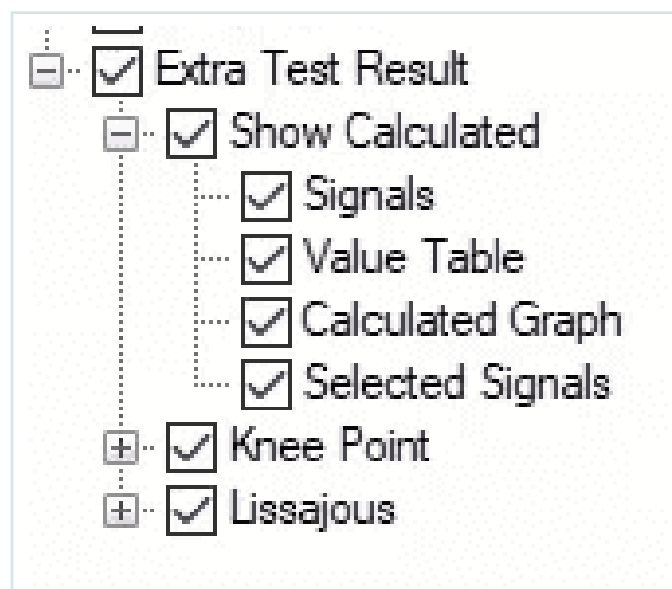


Figure 6

[jg1]Report_Setting_window