



VEBKO ONLINE HELP

How to Connect to AMT

Category	tester
Section	Software Installation and Connection Setting
Language	English
Generated	2026-10-18

In order to be able to perform various tests with the device, it is necessary to connect to it via a laptop or computer. Before starting the device, the earth wire from the back of the device needs to be connected. Note that if the outlet is grounded, there is no need to connect the ground wire from the back of the device. Then, the power cord is connected to the specified location on the back of the device. After connecting the power cord, the power button on the front of the device is pressed and the device turns on. As the device turns on, 8 binary input lights (on the bottom row) and 2 analog DC input lights (on the top right) turn on.

There are two ways to connect to the device: Wi-Fi and LAN. The switch on the back of the device is adjusted according to the connection type. To switch the LAN connection, one end of the LAN cable is connected to the device and the other end is connected to the laptop. When the device and the laptop are properly connected and the switch is changed from Wi-Fi to LAN, the LAN port light of the device and the laptop turn on. The setting for the connection of the LAN port is set only once for each computer before the first connection. To set these settings, go to the "Control Panel" and open "Network and Sharing Center".

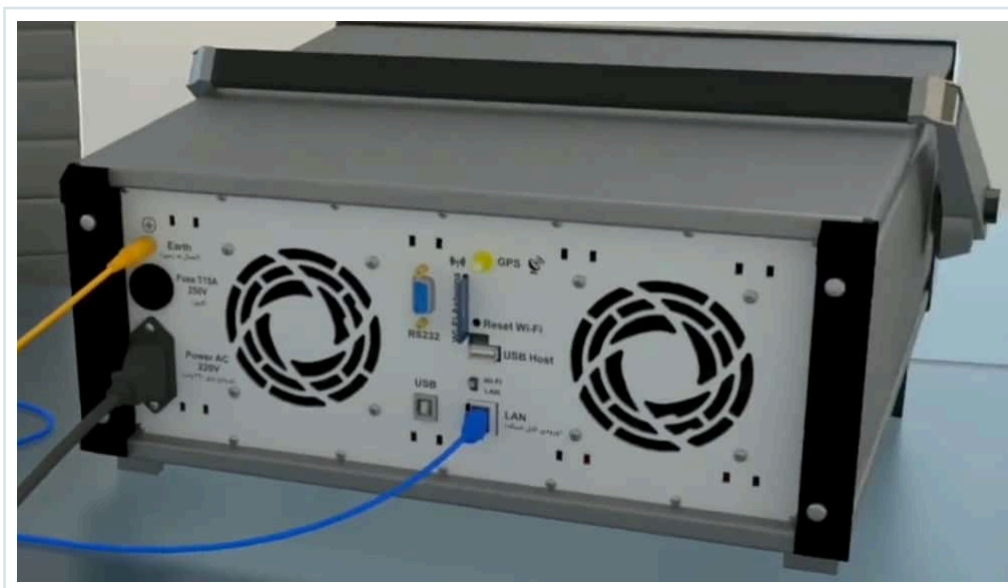


Figure 1

On this window, by clicking on "Change Adapter Setting" another window opens. There are several sections on this window. To change the LAN settings, double click on "Ethernet". Click on "Internet Protocol Version 4" in the opened window. On this window, enter 192.168.1.20 in the "IP Address" field and then close the window. Then, open the "AMPRO" software. By clicking on "Setting" on the start page of the software, a new window opens.

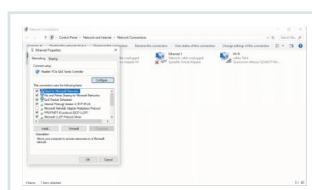


Figure 2

On this window, enter the last three digits of the serial number of the device in the fourth part of the IP field. To connect to the device, click on "CONNECT". If a new version is connected to the device, the "Firmware" of the device will be updated once and after the green bar is filled, the device will be connected in a few seconds. To connect via Wi-Fi, the switch on the back of the device needs to be set on "Wi-Fi". Then, from the "Wi-Fi" in quick launch bar on the laptop, find and select the Wi-Fi connection of the device. The password for this connection is the serial number available from the label attached to the side of the device. Once the connection is complete, click on "Setting" on the start page of the software. On this page, enter the last two digits of the serial number of the device in the fourth part of the "I" field. To connect to the device, click on "CONNECT".

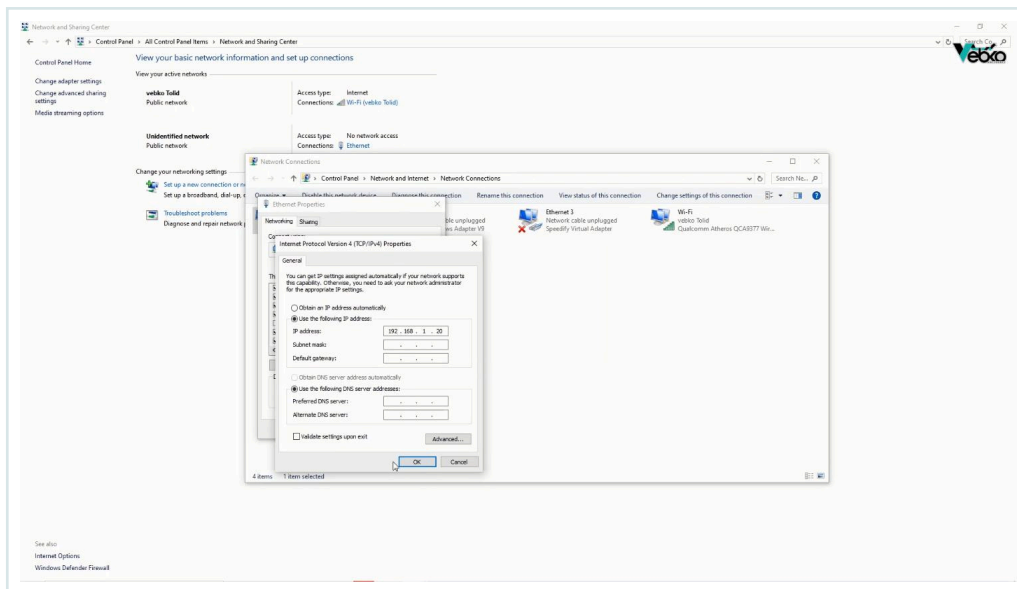


Figure 3

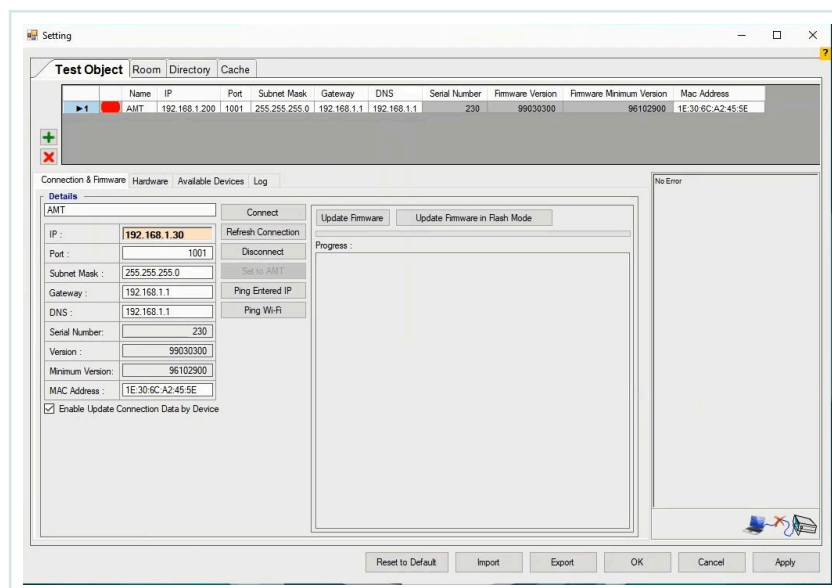




Figure 4

How_to_Connect_to_AMT105